www.disto.com

User Manual:

e-Topographie Laser - www.topographie-laser.eu - 04 72 49 95 46



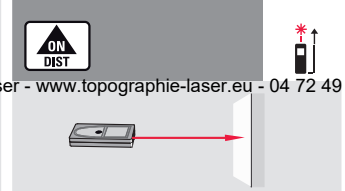

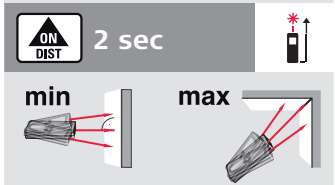

1 Status bar/Function name
2 Haircross for aiming
3 Main line (result)
4 Active function
5 Selection keys linked to the symbol above
6 ON/DIST
7 Clear/OFF
8 Navigation
9 Add
10 Reference
11 Functions/Settings screen
12 Zoom
13 Subtract
14 Equal/Confirm

Charging

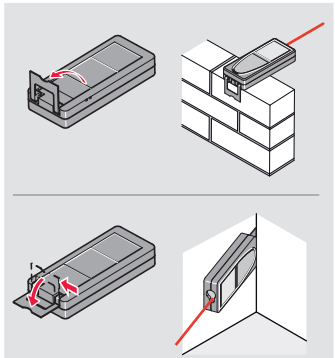

Reference

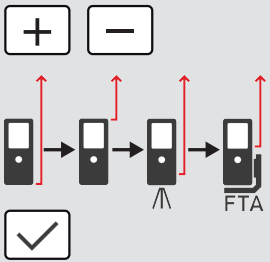

Quick Start

Leica DISTO™ D5

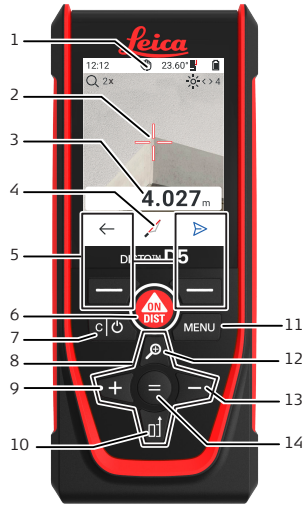

- when it has to be **right**

Leica Geosystems

e-Topographie Laser - www.topographie-laser.eu - 04 72 49 95 46

MENU Functions

MENU → 1 × click

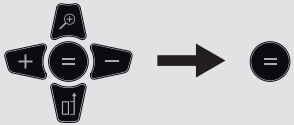

	Distance measurement
	Area
	Volume
	Triangle area
	Smart horizontal mode
	Level
	Pythagoras
	Stake-out
	Timer
	Height tracking
	Memory
	Slope
	Height profile

MENU Settings

MENU → 2 × click

	Tilt units
	Distance units
	Screen rotation
	Beep
	Bluetooth
	Bluetooth settings
	Display illumination
	Favorites
	Keypad lock
	Tilt calibration
	Information/Serial number
	Distance offset
	Reset device
	Time
	Gesture control
	Language
	Shutdown time
	Pointfinder

Pointfinder On/Off

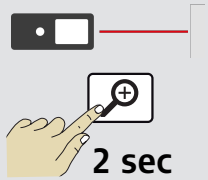

Zoom

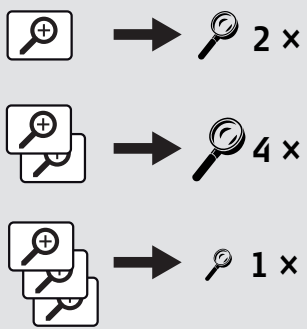

Status Bar

12:22	Time
	Gesture control
	Bluetooth® active
	Measuring reference
5.30°	Inclination
	Battery status
	Distance offset set

User Interactions

	Measuring indication
	Confirm
	Back
	Repeat
	Bluetooth® send
	Bluetooth® navigation On/Off
	Help
	Delete
	Use navigation, confirm with equal key
	Set back to 0 (Offset, Stake-out)